



Shed Assembly Instructions


1. Set patio slabs on prepared level location for shed
2. Set floor level on slabs

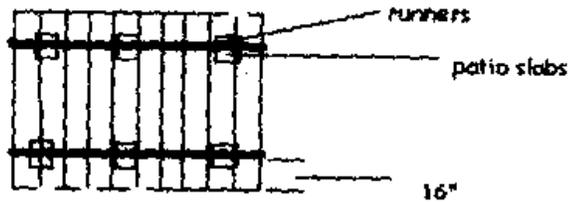

3. Stand up back wall
4. Slide side walls into back wall
5. Stand up front wall and slide in side walls
6. Fasten all four top corners on the inside
7. Check to be sure that the walls are positioned properly at the bottom around the floor, and fasten the walls down to the floor. Do not nail in the door opening because it will have to be cut out.
8. Nail outside corners of wall sheathing to the corner studs. Nail bottom of wall sheets to the floor.
9. Nail rafters on top of the back wall studs. Nail rafters at same spacing on the front wall. Be sure the notch in the rafter is tight against siding sheet on the back wall.
10. Put on the front and back fascia board. They will have to be cut to length. Length will be from outside edge of each gable end fascia board.

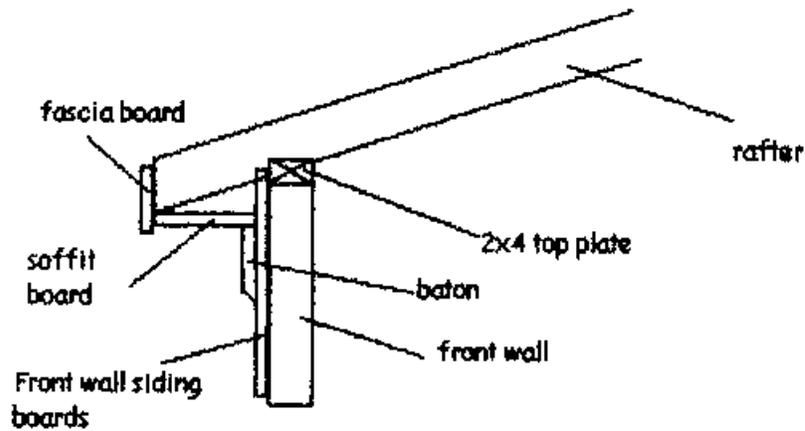

11. Install the front soffit board between the fascia board and the front wall siding sheet. The length will be from the outside edge of the end rafters. You will most likely have to cut the front soffit for width and length because they sometimes vary a little from shed to shed, so therefore it is better that they be cut on site.
12. You may now finish off the four outside corners, with the trim provided.
13. You are now ready to apply the roof sheathing. Start the sheathing at the bottom by the fascia boards, even with the edge of the gable end rafter, should leave you half on the rafter, at the other edge of the sheet. On the other side of the roof, start on the opposite corner of the shed, so that the joints of the sheets can be scattered. All the pre-cut plywood will fit in the appropriate spot.
14. Apply the aluminum eave starter at the front and back fascia boards, and along the gable on each side.
15. Now is the time to apply shingles. Instructions are on the shingle bundles.

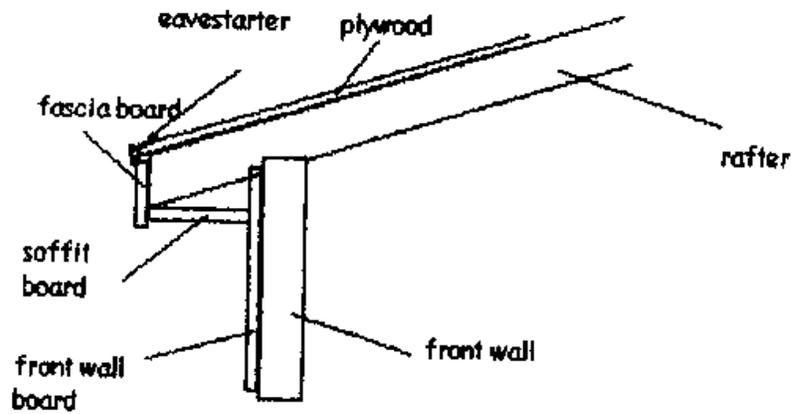

16. You are now ready to hang the doors.

- a. Position doors in opening
- b. Fasten the hinges to the trim on the shed
- c. Cut out bottom 2 x 4 in the door opening
- d. Install the door handle on the door that opens first
- e. If a double door, install the barrel latches on inside of the door to the header and the plywood floor. (fasten the 1-1/2" x 1-1/2' block, which is attached to the inside of the door, to the bottom of the door as a spacer to attach the barrel latch to)

You are now finished your shed, Be sure to paint it in order to keep it looking great for years to come.

Thank you for your business

If you have any questions or comments, please feel free to call:

519-846-2345

Windmill Landscapes Ltd.

Website: www.windmilllandscapes.com

Email: info@windmilllandscapes.com